

Creating Platter Feet


Stephen Hatcher ©2012



Step 1 - Turn a ridge from the tenon that has the cross-section of the foot you want to create. Mark where the three feet will go.



Step 2 - Remove material between the feet using a power carver. Here an Arbortech tool is used. Make the recesses rounded.

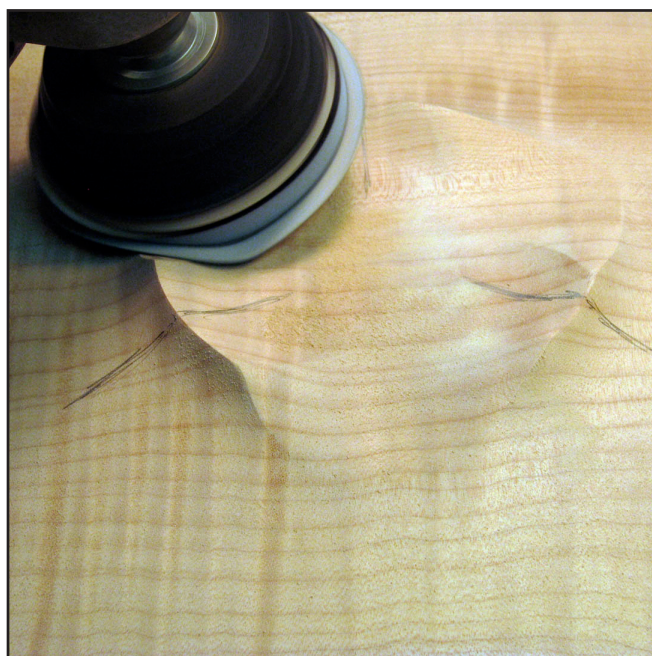

Step 3 - Use a power sander to smooth the areas between the feet. Change the angle of the sanding pad between the pads to make a uniform surface.



Step 4 - Use 400+ grit to touch-up the outside of the feet and create crisp, uniform lines. Hand sand with 400+ grit to smooth the edges slightly.